OptiControl ICS08/09

After filter control and monitoring system

The OptiControl control cabinets (type ICS08 and 09) contain the components for the operation and monitoring of an after filter. A redundant system of pressure transmitters is integrated to fully comply with the safety requirements of the EN16985 and ATEX directives. Additionally, the power supply for the entire powder coating system, the start-up circuit of the fan and the triggering of the cleaning of the filter cartridges are integrated. The filter system is operated and monitored completely via the MagicControl 4.0 main control unit.

Customer benefits:

- Automatic cleaning procedure controlled by filter cartridge resistance monitoring and resulting in longer filter cartridge life and reduced compressed air consumption.
- Visualization of all parameters on MagicControl 4.0
- Continuous filter parameter monitoring and alerting function for improved operation stability and constant process conditions. Historical pressure readings logged for long term data analysis.




Features Control Cabinet:

ICS08	ICS09
After filter control with Star Delta Starter.	After filter control with Frequency Converter.
Cartridge cleaning is triggered automatically if this resistance exceeds the respective threshold.	
Visualization of the fan and filter cartridge status on MagicControl 4.0.	
For safety reasons the air flow through the fan is redundantly monitored, taking into consideration the conditions: Required system operating volume flow Low volume flow (alarm message) Critical volume flow (ATEX: Stop spray)	
Adjusted to altitude and average temperature of the installation location.	
Full compliance with EN16985 and ATEX directives.	



After Filter

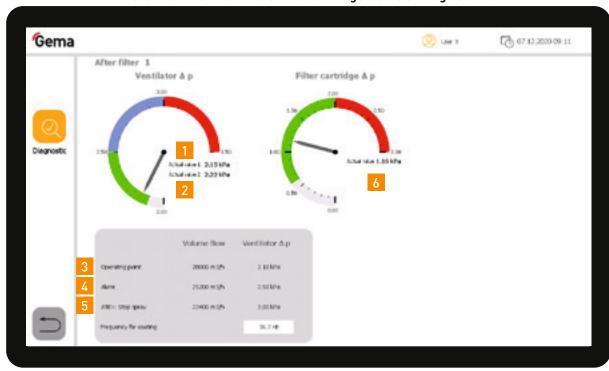

Visualization of the fan and filter cartridge status on MagicControl 4.0

The real time operating status of the fan and filter cartridges is continuously displayed.

Ventilator ∆p

The correct and sufficient aspiration volume of the coating booth is defined by the *Ventilator* Δp : An increased pressure indicates a lower air flow. To comply with safety regulations (ATEX), the powder coating process is switched off at the minimum permissible air flow. The differential pressure measurement is redundant. The parameters for correct operation of the filter are calculated automatically.

- 1 Actual value: display (graphically and in digits) of the currently measured differential pressure
- 2 Redundant: display (in digits) of the currently measured redundant differential pressure
- 3 Operating point: automatically calculated based on the installation site
- 4 Alarm: automatically calculated value indicates a lower aspiration volume, coating process is not interrupted but an alarm message appears
- 5 ATEX Stop spray: immediate stop of the coating process at this automatically calculated value

Filter cartridge ∆p

The condition of the cartridges is defined by the Filter cartridge Δp which corresponds to the filter resistance. The cleaning is automatically triggered accordingly.

6 Actual value: display (graphically and in digits) of the currently measured filter resistance

